




## 24" VANITY

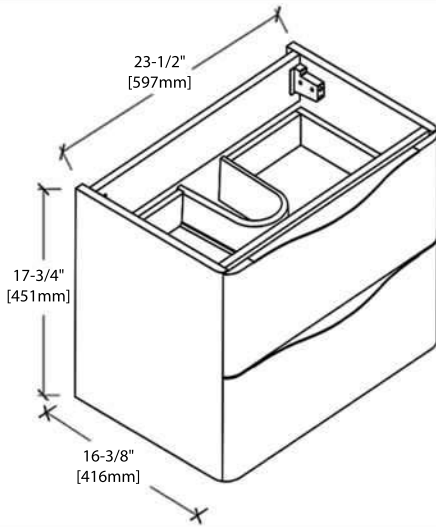

V8012 24

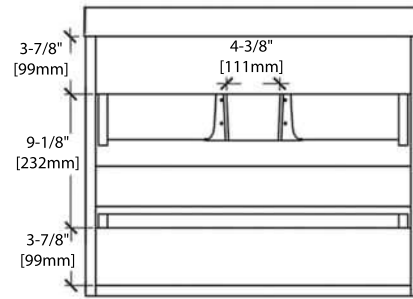


BACK VIEW

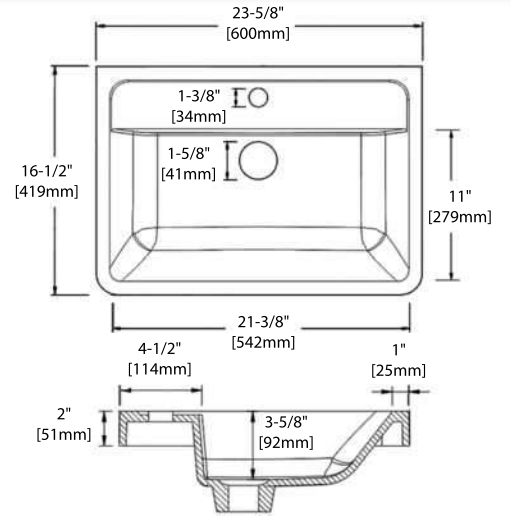


A10 2417 02

## MEDICINE CABINET

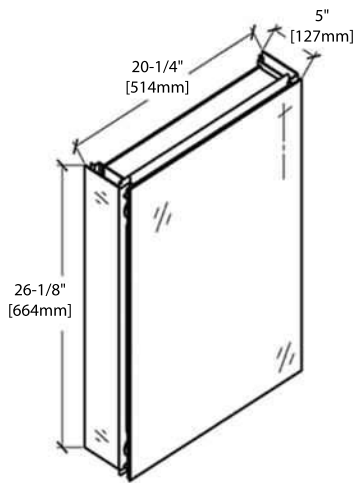

MC7 2026

## 16" SIDE CABINET

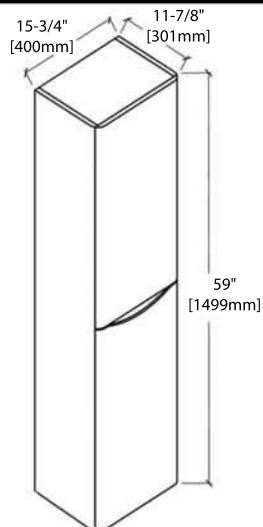

S8012 16 10

# REQUIRED TOOLS



Tape Measure



Pencil



Electric Drill



Drill Bit (6mm)



Silicone



Screwdriver

## PARTS INCLUDED



4A









10B



6C



2D

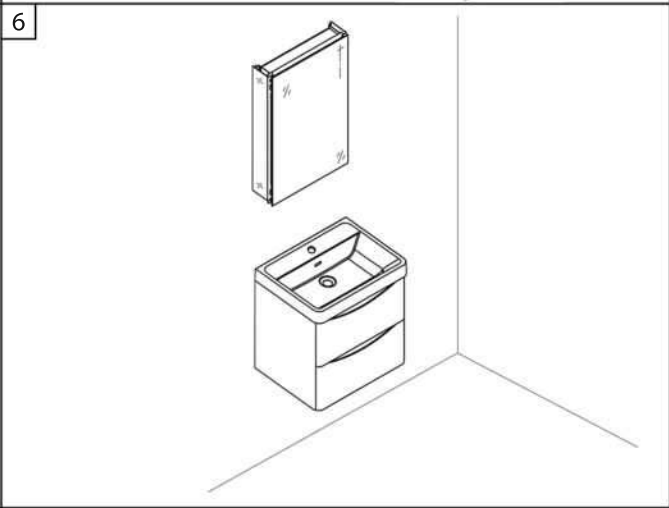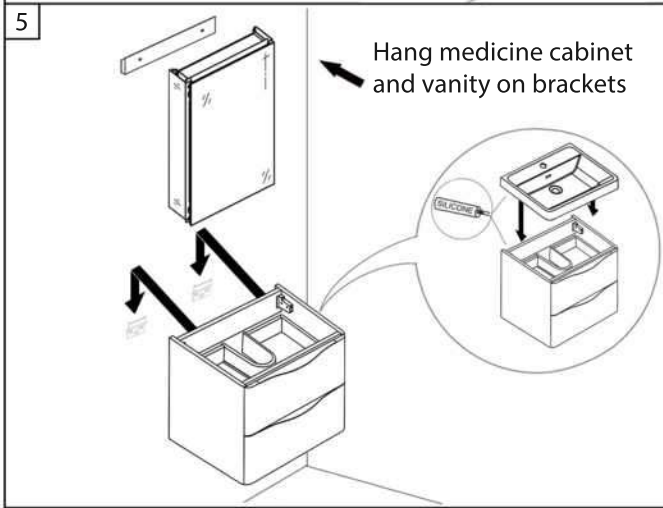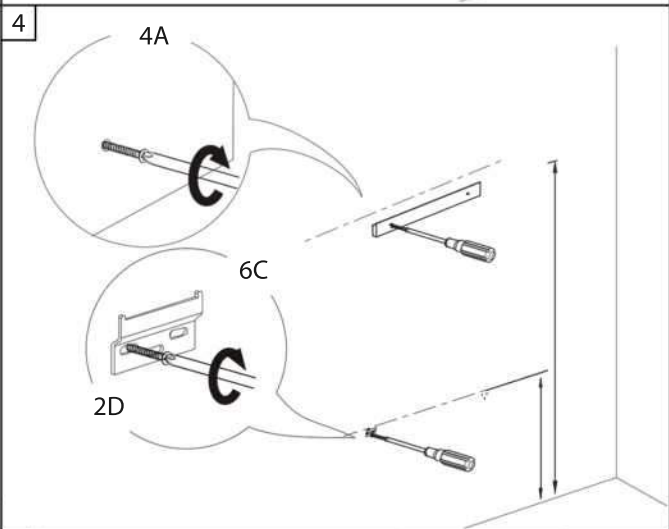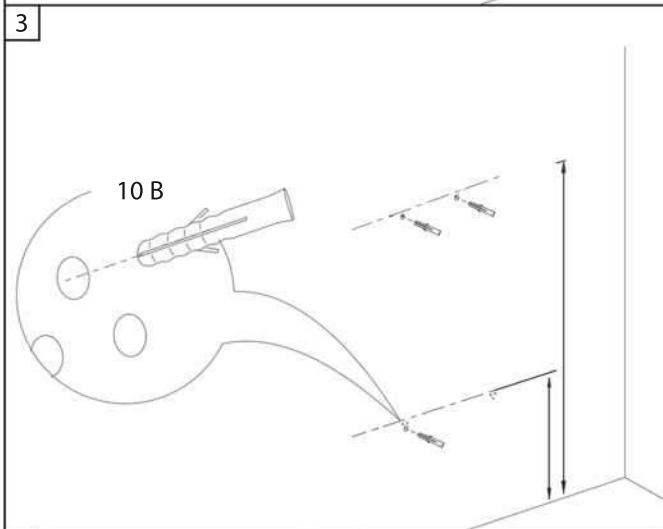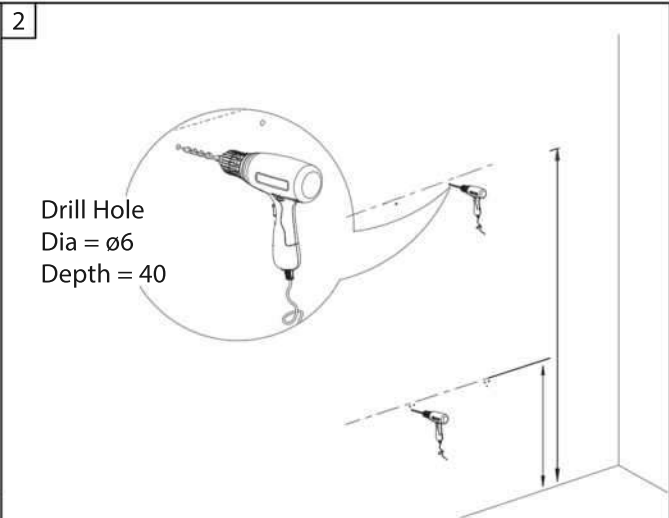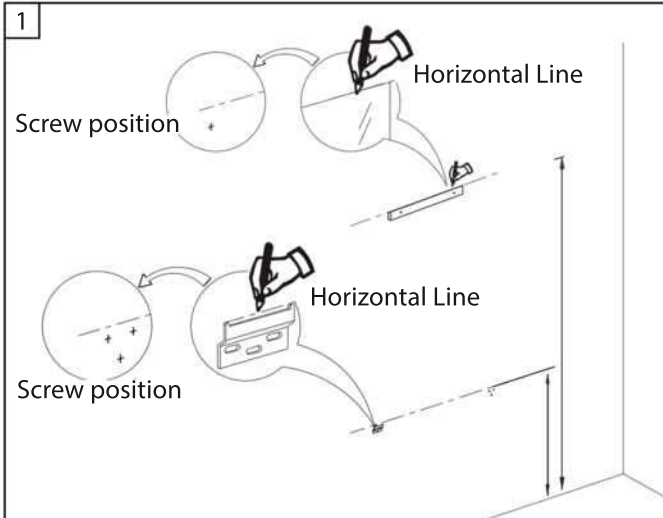

# REQUIRED TOOLS



Tape Measure



Pencil



Electric Drill



Drill Bit (6mm)



Silicone



Screwdriver

## PARTS INCLUDED



2A



2B

