




## 24" VANITY

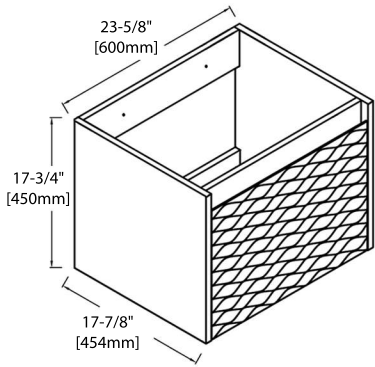

V8008 24 01

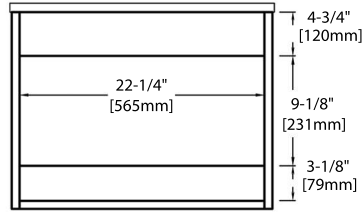


BACK VIEW

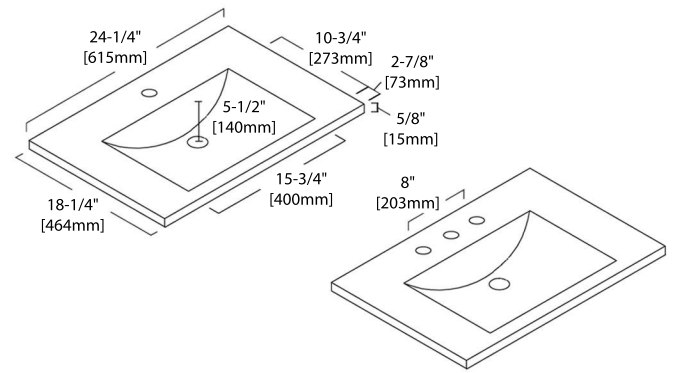


C04 2418

C04 2418 TH


## 30" VANITY

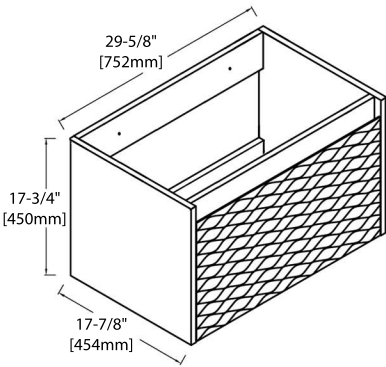

V8008 30 01

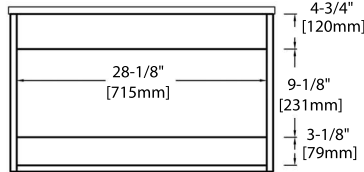


BACK VIEW

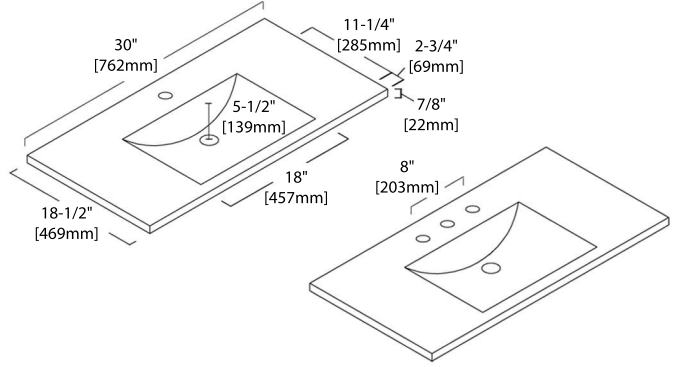


C04 3018

C04 3018 TH


## 36" VANITY

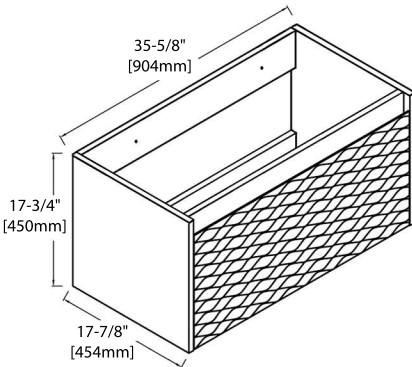

V8008 36 01

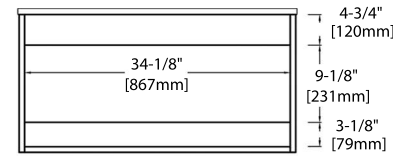


BACK VIEW

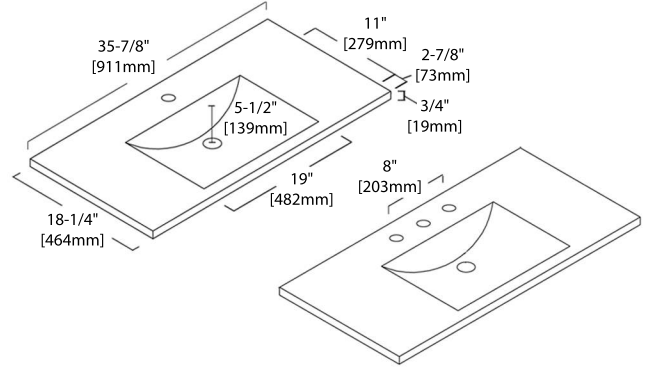


C04 3618

C04 3618 TH


## 48" VANITY

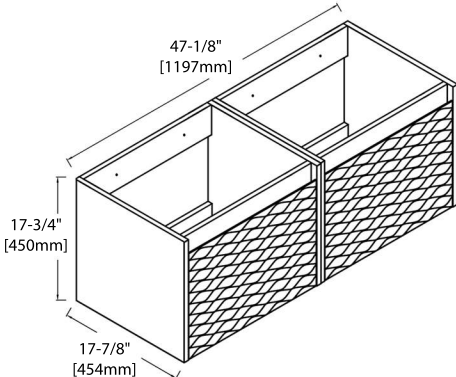

V8008 48 01

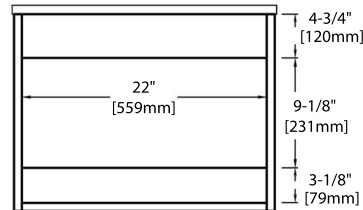


BACK VIEW

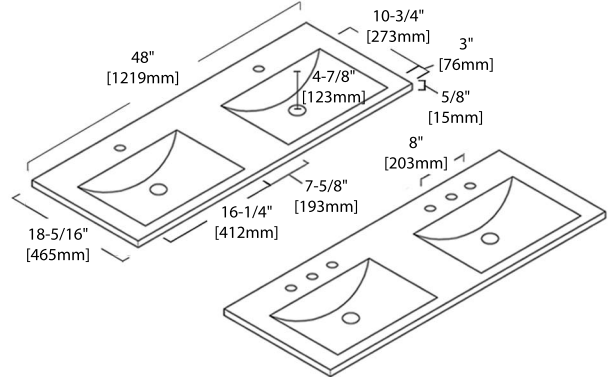


C04 4818

C04 4818 TH

## 24" MIRROR / MEDICINE CABINET

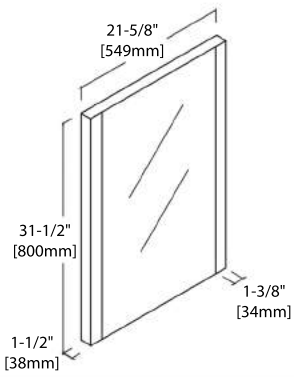


M6001 24

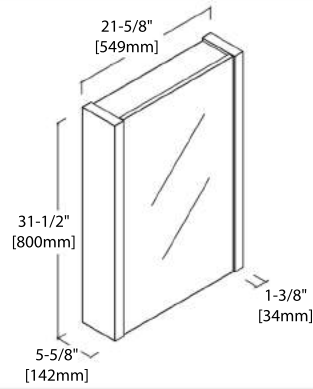


MC7014 24

## 30" MIRROR / MEDICINE CABINET

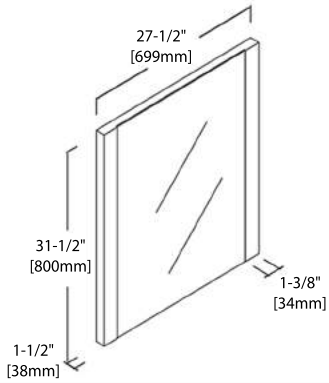


M6001 30

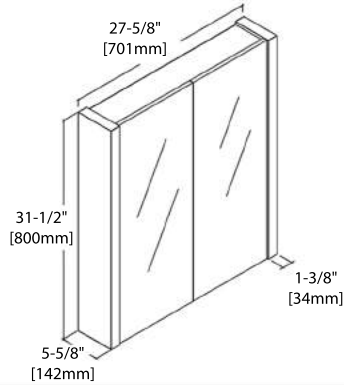


MC7014 30

## 36" MIRROR

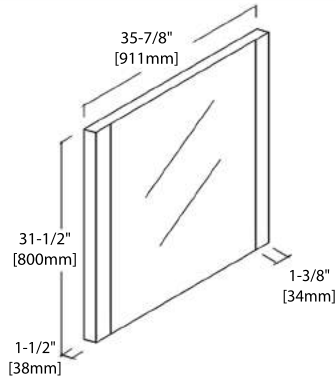


M6001 36

## 12" SIDE CABINET

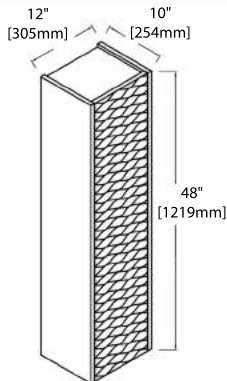

S8008 12 01

# REQUIRED TOOLS



Tape Measure



Pencil



Electric Drill



Drill Bit (6mm)



Silicone



Screwdriver



Spirit Lever

Paris 24" / 30" / 36"



4A



10B



6C



2D

## PARTS INCLUDED



8A









20B







12C



4D

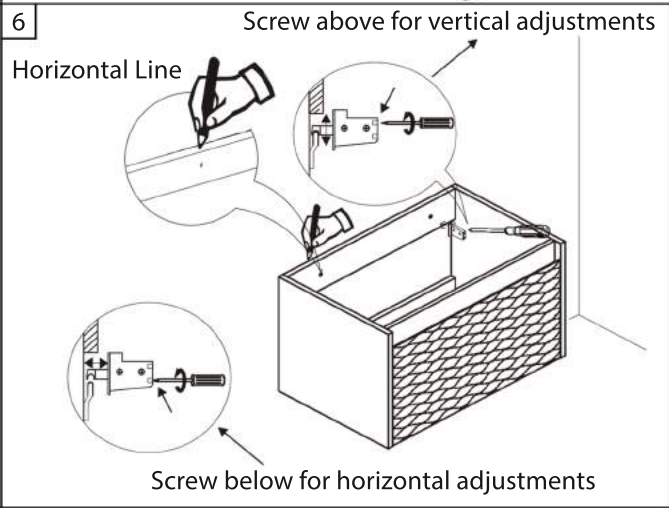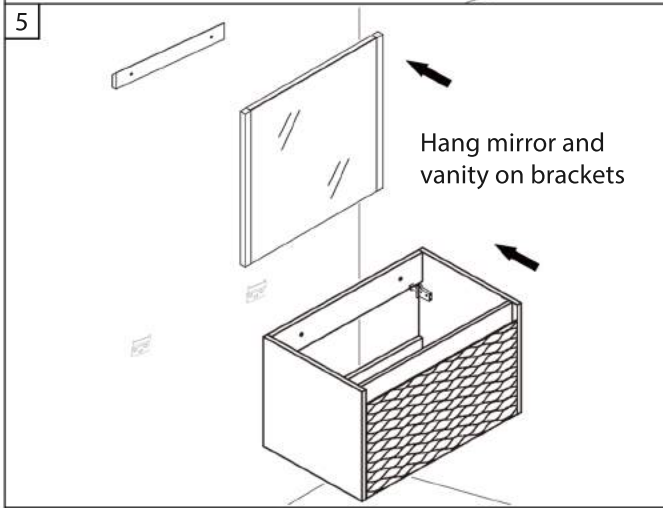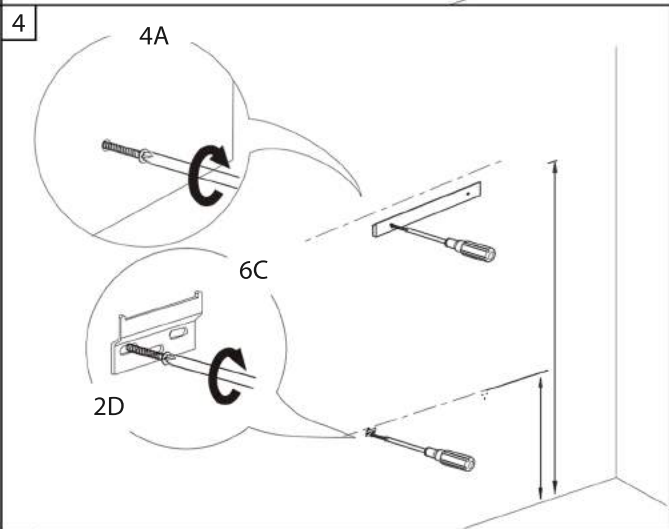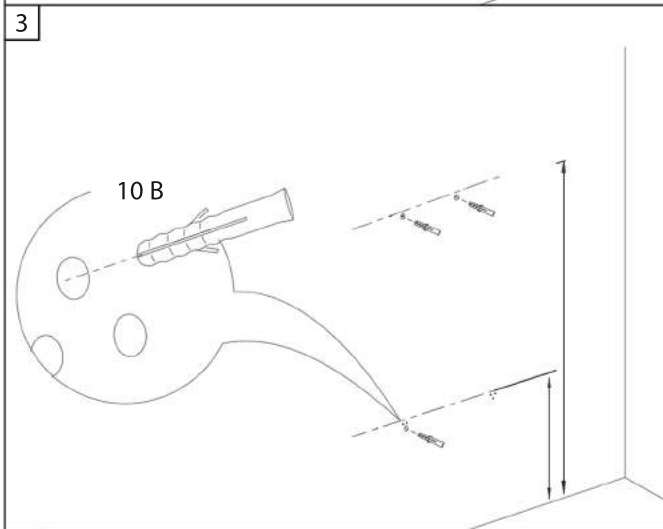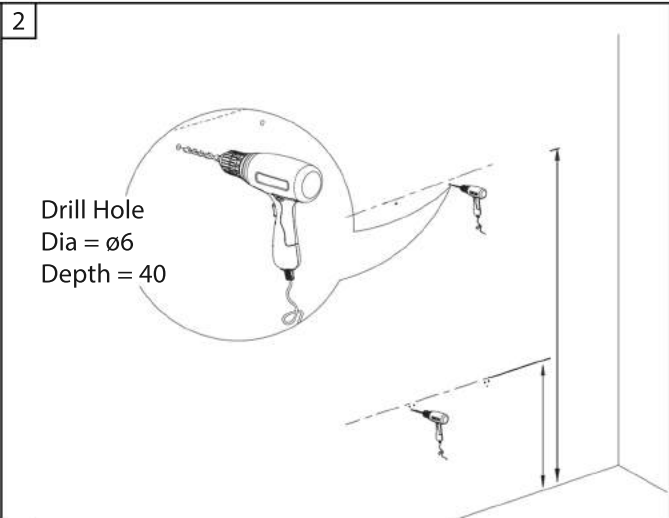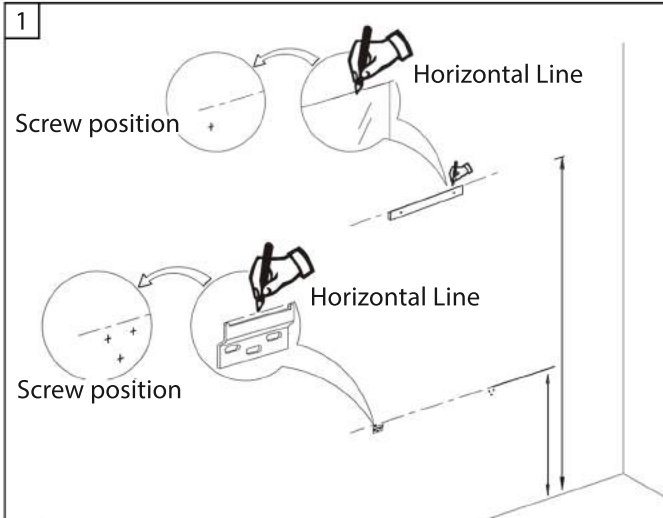

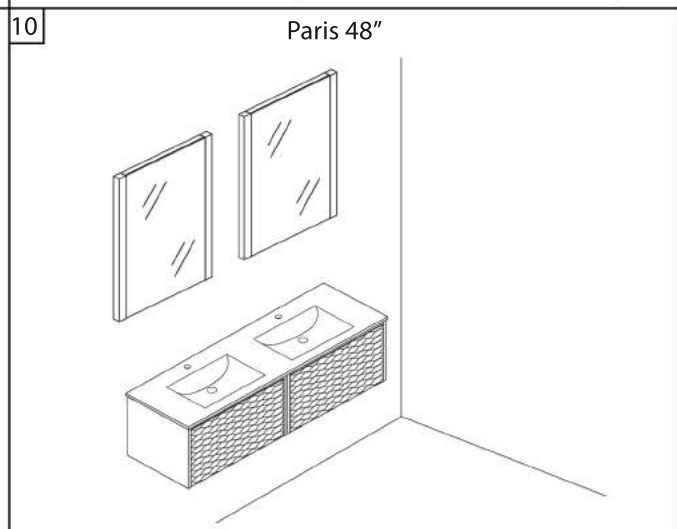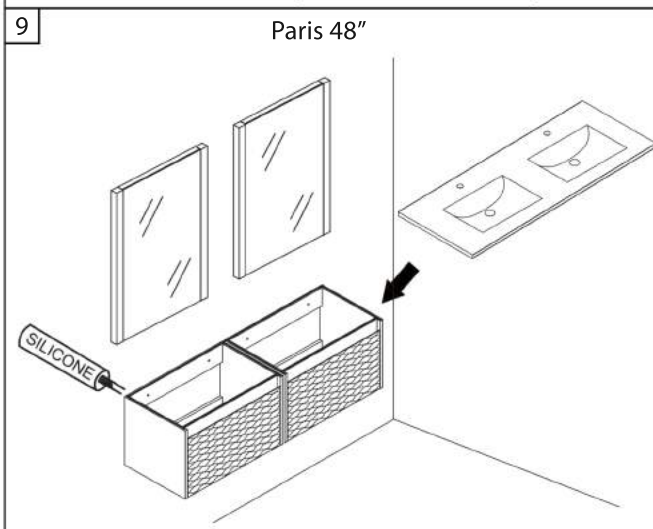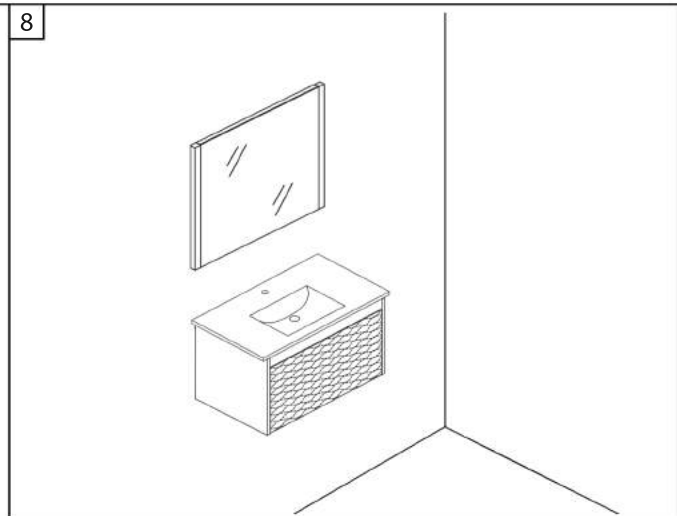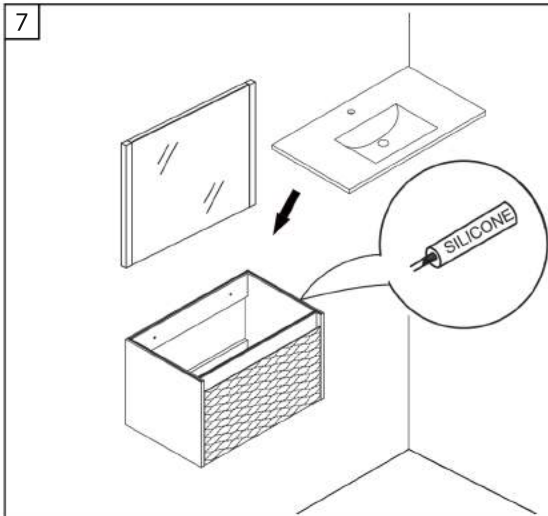

**PARTS INCLUDED**

2A

2B

